# Sprinkler Pipe Installation Design Details

A Supplement to APA Technical Note: Sprinkler Pipe Installation for APA Performance Rated I-Joists, Form J745





Details provided by Kraig Kirschner, Principle Technical Committee Member National Fire Protection Association (NFPA) 13, Standard for the Installation of Sprinkler Systems; Hanging and Bracing

Note: When CPVC sprinkler systems are used, it is the responsibility of the designer to ensure the pipe and fittings are listed by a listing agency for I-joist systems in accordance with NFPA 13.

### FIGURE 1 APA PERFORMANCE RATED I-JOIST CEILING FLANGE HANGER





Install per NFPA 13 and manufacturer's instructions

Steel sprinkler system pipe 4" Max. dia. or 500# max. point load

Form No. J745SUP = © 2009 APA – The Engineered Wood Association = www.apawood.org

#### Figure 2 APA PERFORMANCE RATED I-JOIST COACH SCREW HANGER



#### **Install per NFPA 13**



#### Install per NFPA 13 and manufacturer's instructions

## FIGURE 4 APA PERFORMANCE RATED I-JOIST ANGLE BRACKET HANGER



Install per NFPA 13 and manufacturer's instructions

## Figure 5 APA PERFORMANCE RATED I-JOIST OFFSET EYE-SOCKET HANGER



#### Install per NFPA 13 and manufacturer's instructions

### FIGURE 6 APA PERFORMANCE RATED I-JOIST EYE ROD HANGER



Install per NFPA 13 Steel sprinkler system pipe 4" Max. dia. or 500# max. point load

Form No. J745SUP • © 2009 APA – The Engineered Wood Association • www.apawood.org

#### FIGURE 7 APA PERFORMANCE RATED I-JOIST LOAD CARRIED BY FLANGES



#### Install per NFPA 13 and manufacturer's instructions

Steel sprinkler system pipe see note above

#### FIGURE 8 APA PERFORMANCE RATED I-JOIST NFPA 13 STEEL ANGLE TRAPEZE WITH HANGER



Install 48" max. length NFPA 13 trapeze angle iron



**Install per NFPA 13** 

Steel sprinkler system pipe

4" Max. dia. = 500# max. point load



**Install per NFPA 13** CPVC sprinkler system pipe 2 1/2" Max. dia. = 290# max. Point load

#### FIGURE 9

#### APA PERFORMANCE RATED I-JOIST CPVC HANGER - SURFACE MOUNT



Install per NFPA 13 and manufacturer's instructions

CPVC sprinkler system pipe 3" Max. dia. or 310# max. point load

# FIGURE 10 APA PERFORMANCE RATED I-JOIST CPVC HANGER - OFFSET



#### Install per NFPA 13 and manufacturer's instructions

CPVC sprinkler system pipe 3" Max. dia. or 310# max. point load

Form No. J745SUP 
© 2009 APA – The Engineered Wood Association 
www.apawood.org

# FIGURE 11 APA PERFORMANCE RATED I-JOIST CPVC HANGER - SURFACE MOUNT



#### Install per NFPA 13 and manufacturer's instructions

CPVC sprinkler system pipe 3" Max. dia. or 310# max. point load

Form No. J745SUP 
© 2009 APA – The Engineered Wood Association 
www.apawood.org

## FIGURE 12 APA PERFORMANCE RATED I-JOIST CPVC HANGER - DOUBLE OFFSET



#### Install per NFPA 13 and manufacturer's instructions

CPVC sprinkler system pipe 3" Max. dia. or 310# max. point load

Form No. J745SUP • © 2009 APA – The Engineered Wood Association • www.apawood.org

#### FIGURE 13" APA PERFORMANCE RATED I-JOIST" CPVC HANGER - FACE MOUNT"



#### Install per NFPA 13 and manufacturer's instructions

CPVC sprinkler system pipe" 3" Max. dia." or 310# max. point load"

### FIGURE 14 - Option 1 APA PERFORMANCE RATED I-JOIST SWAY BRACE BLOCKING FOR SEISMIC LOADS PARALLEL TO THE JOIST



#### Install per NFPA 13 and manufacturer's instructions

Max. horizontal load = 650# includes a 1.33 duration of load adjustment

### FIGURE 14 - Option 2 APA PERFORMANCE RATED I-JOIST SWAY BRACE BLOCKING FOR SEISMIC LOADS PARALLEL TO THE JOIST



#### Install per NFPA 13 and manufacturer's instructions

Max. horizontal load = 1000# includes a 1.33 duration of load adjustment

#### FIGURE 15 APA PERFORMANCE RATED I-JOIST SWAY BRACE BLOCKING FOR SEISMIC LOADS PERPENDICULAR TO THE JOIST



#### Install per NFPA 13 and manufacturer's instructions

Max. horizontal load = 585# includes a 1.33 duration of load adjustment

#### FIGURE 16 APA PERFORMANCE RATED I-JOIST SWAY BRACE BLOCKING FOR SEISMIC LOADS PERPENDICULAR TO THE JOIST



Max. horizontal load = 515# includes a 1.33 duration of load adjustment

#### FIGURE 17 APA PERFORMANCE RATED I-JOIST SWAY BRACE BLOCKING FOR SEISMIC LOADS PERPENDICULAR TO THE JOIST



#### FIGURE 18 APA PERFORMANCE RATED I-JOIST CPVC HANGER IN WEB BORE



#### Install per NFPA 13 and manufacturer's instructions

CPVC sprinkler system pipe 3" Max. dia. or 310# max. point load

# Sprinkler Pipe Installation for APA Performance Rated I-Joists

We have field representatives in many major U.S. cities and in Canada who can help answer questions involving APA trademarked products. For additional assistance in specifying engineered wood products, contact us:

#### APA HEADQUARTERS

7011 So. 19th St. = Tacoma, Washington 98466 = (253) 565-6600 = Fax: (253) 565-7265

#### PRODUCT SUPPORT HELP DESK

(253) 620-7400 = E-mail Address: help@apawood.org

#### DISCLAIMER

The information contained herein is based on APA – The Engineered Wood Association's continuing programs of laboratory testing, product research and comprehensive field experience. Neither APA, nor its members make any warranty, expressed or implied, or assume any legal liability or responsibility for the use, application of, and/or reference to opinions, findings, conclusions or recommendations included in this publication. Consult your local jurisdiction or design professional to assure compliance with code, construction and performance requirements. Because APA has no control over quality of workmanship or the conditions under which engineered wood products are used, it cannot accept responsibility for product performance or designs as actually constructed.

Form No. J745SUP/Issued June 2009



REPRESENTING THE ENGINEERED WOOD INDUSTRY