
## METHOD 1 - SHEATHING REINFORCEMENT ONE SIDE

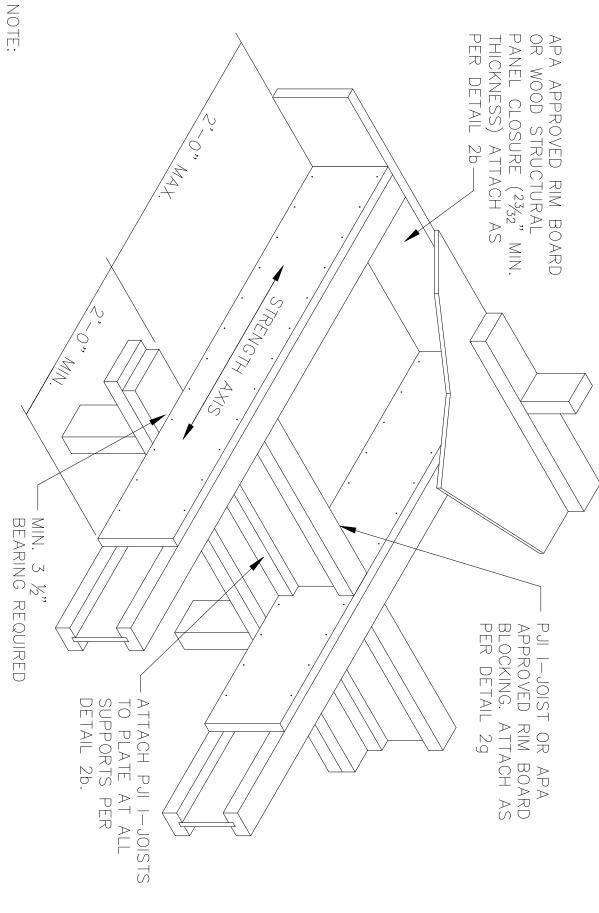

SHALL MATCH FULL HEIGHT OF JOIST. NAIL BOTH TOP AND BOTTOM FLANGES INSTALL WITH STRENGTH AXIS HORIZONTAL AS SHOWN. ATTACH PJI TO PLATE MIN. 23/32" THICK APA SPAN RATED SHEATHING 48/24 OSB REQUIRED 9 2 1/2" NAILS @ SIDE OF PER DETAIL 2b JOIST. DEPTH