
METHOD 2 - SHEATHING REINFORCEMENT TWO SIDES

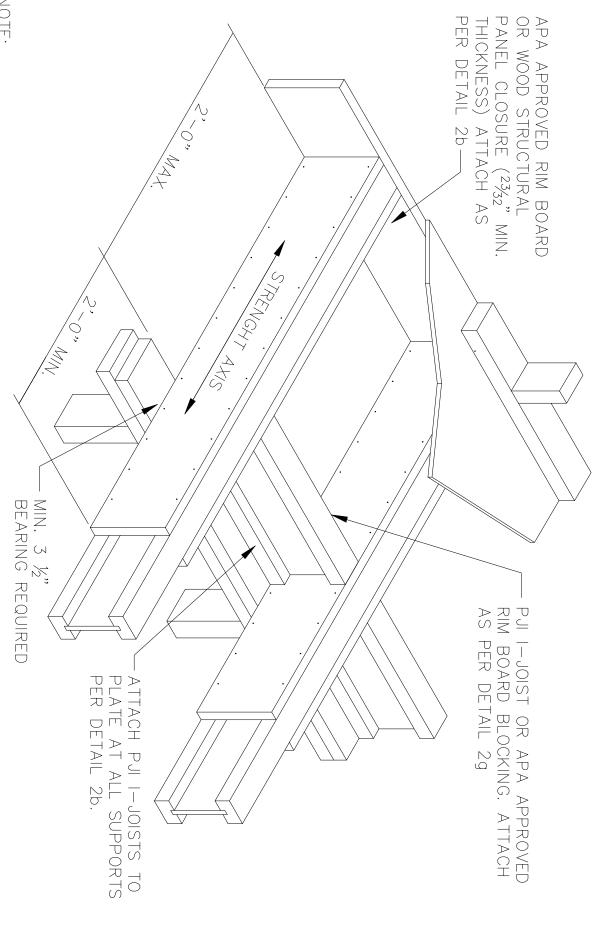

NOTE:

SHALL MATCH FULL HEIGHT OF JOIST. NAIL BOTH TOP AND BOTTOM FLANGES $\mathrm{w}_{/}$ offset nail pattern 3" at reinforcement on opposite face. Install MIN. 23/32" THICK APA SPAN RATED SHEATHING 48/24 OSB HORIZONTAL AS SHOWN. ATTACH PJI TO PLATE AS PER DETAIL 2b REQUIRED 0 Z SIDE OF 2 1/2" NAILS @ 6"c/c WITH STRENGTH AXIS JOIST. DEPTH